



SHAD

HONDA SERIES NC S/X/D 700/750 '12-14

HONT74IF



1 261676 x1 →
261677 x1 ←

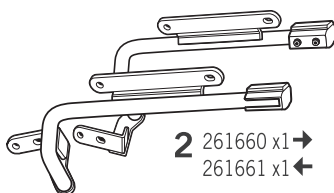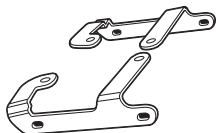

2 261660 x1 →
261661 x1 ←

3 304028 x4
M8 x 25 DIN 7380



4 303020 x8
Ø8



5 302024 x4
M8



6 304211 x2
M8 x 15 DIN 933



7 303045 x2
Ø8



! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

